

マニホールドレギュレータ 集中給気仕様 ARM11A Series




オーダーメイド仕様
(詳細はP.1030をご参照ください。)

型式表示方法

ARM11A A 1 - 3 07 - M Z - N

① ② ③ ④ ⑤ ⑥ ⑦ ⑧

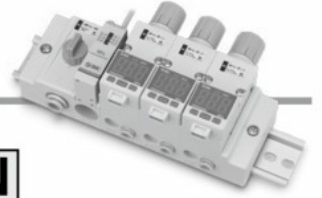


①ハンドル位置

記号	位置
A	上
B	正面
C	下



②IN・OUT配管位置

位置 記号	IN側			OUT側		
	下	上	下	上	下	上
1	●			●		
2		●			●	
3	●					●
4			●		●	

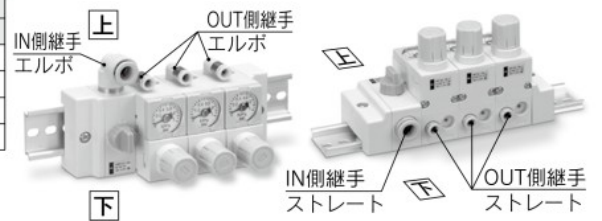

③レギュレータブロックの連数

記号	連数
1	1連
2	2連
3	3連
4	4連
5	5連
6	6連
7	7連
8	8連
9	9連
M	10連

④IN・OUT継手種類(下図参照)

ミリサイズ

取付位置 継手種類 記号	IN側						OUT側			
	ストレート			エルボ			ストレート		エルボ ^{注)}	
	ø6	ø8	ø10	ø6	ø8	ø10	ø4	ø6	ø4	ø6
07	●						●			
08	●							●		
09		●						●		
10		●						●		
11			●					●		
12			●					●		
19				●					●	
20				●					●	
21					●				●	
22					●				●	
23						●			●	
24						●			●	
26	●							●		
27	●							●		
28		●							●	
29		●							●	
30			●						●	
31			●						●	
33				●				●		
34				●				●		
35					●				●	
36					●				●	
37						●	●			
38						●	●			

インチサイズ

取付位置 継手種類 記号	IN側						OUT側			
	ストレート			エルボ			ストレート		エルボ ^{注)}	
	ø1/4	ø5/16	ø3/8	ø1/4	ø5/16	ø3/8	ø5/32	ø1/4	ø5/32	ø1/4
57	●							●		
58	●								●	
59		●							●	
60		●							●	
61			●						●	
62			●						●	
69				●						●
70				●						●
71					●					●
72					●					●
73						●				●
74						●				●
76	●								●	
77	●								●	
78		●								●
79		●								●
80			●							●
81			●							●
83				●					●	
84				●					●	
85					●					●
86					●					●
87						●	●			
88						●	●			

注) ハンドル位置とOUT配管位置が同一面の場合、エルボ継手配管方向は裏側(DINレール側)になります。
デジタル圧力スイッチ付の場合、配管方向によっては、コネクタ部と干渉することがありますのでご注意ください。

