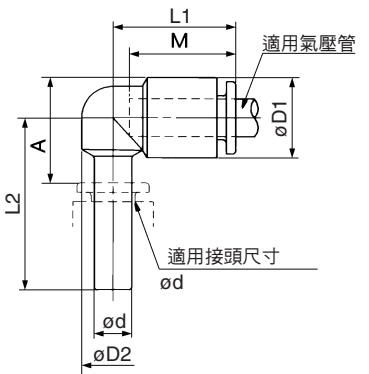


直通L型:KRL-W2

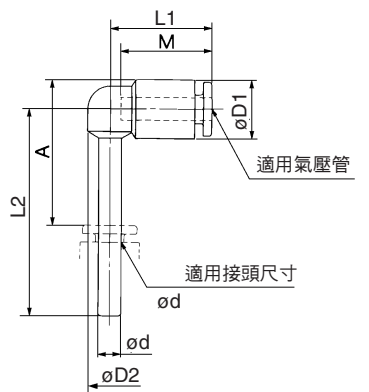
適用氣壓缸 外徑 mm	適用接頭 配管 ød	型式	註1) øD1	øD2	L ₁	L ₂	A	M	有效斷面積mm ²		質量 g
									FR2層	FR軟尼龍	
6	6	KRL06-99W2	12.8	10	20	27.5	17	17	9.0	4.2	3
8	8	KRL08-99W2	15.2	12	22.5	31.5	21	18.5	21.6	14.9	5
10	10	KRL10-99W2	18.5	14	25.5	35.5	23.5	21	35.2	25.0	9
12	12	KRL12-99W2	20.9	16	27	37.5	26	22	50.2	39.7	10

註1) øD1為最大徑的意思。

**長直通L型:KRW-W2**

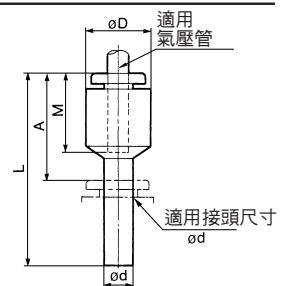
適用氣壓缸 外徑 mm	適用接頭 配管 ød	型式	註1) øD1	øD2	L ₁	L ₂	A	M	有效斷面積mm ²		質量 g
									FR2層	FR軟尼龍	
6	6	KRW06-99W2	12.8	10	20	41.5	31	17	9.0	4.2	4
8	8	KRW08-99W2	15.2	10	22.5	48	37	18.5	21.6	14.9	6
10	10	KRW10-99W2	18.5	14	25.5	55	43.5	21	35.2	25.0	9
12	12	KRW12-99W2	20.9	16	27	59.5	48	22	50.2	39.7	13

註1) øD1為最大徑的意思。

**減徑連接器:KRR-W2**

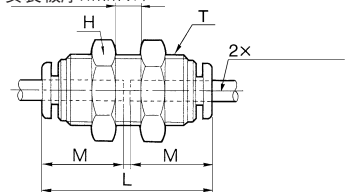
適用氣壓缸 外徑mm	適用接頭 配管ød	型式	註1) øD	L	A	M	有效斷面積mm ²		質量 g
							FR2層	FR軟尼龍	
6	8	KRR06-08W2	12.8	37	18.5	17	10.4	5.6	2.5
	10	KRR06-10W2		39.5					9.3
8	10	KRR08-10W2	15.2	41	20	18.5	26.1	18.0	4.0
	12	KRR08-12W2		42					4.6
10	12	KRR10-12W2	18.5	44.5	23	21	41.5	32.8	33

註1) øD為最大徑的意思。

**隔壁用接頭:KRE-W2**

適用氣壓缸 外徑mm	型式	T (M)	H (六角對邊)	L	安裝 孔	M	有效斷面積mm ²		質量 g
6	KRE06-00W2	M14×1	17	34.5	15	17	10.4	5.6	33
8	KRE08-00W2	M16×1	19	38	17	18.5	26.1	18.0	52
10	KRE10-00W2	M20×1	24	42.5	21	21	41.5	29.5	70
12	KRE12-00W2	M22×1	27	44	23	22	58.3	46.1	90

安裝板厚11mm以下

**隔壁用母螺牙接頭:KRE-W2**

適用氣壓缸 外徑 mm	連接螺牙 Rc	型式	T (M)	H1 (六角對邊)	H2 (六角對邊)	L ₁	L ₂	安裝孔	M	有效斷面積mm ²		質量 g
6	1/8	KRE06-01W2	M14×1	17	17	28	11	15	17	10.4	5.6	25
	1/4	KRE06-02W2				31.5	15					40
	3/8	KRE06-03W2				33.5	17					29
8	1/8	KRE08-01W2	M16×1	17	19	27.5	7.5	17	18.5	26.1	18.0	28
	1/4	KRE08-02W2				33	13					27
	3/8	KRE08-03W2				35	15					48
10	1/4	KRE10-02W2	M20×1	22	24	34.5	12.5	21	21	41.5	29.5	53
	3/8	KRE10-03W2				36.5	15					67
12	3/8	KRE12-03W2	M22×1	24	27	37	14	23	22	58.3	46.1	92
	1/2	KRE12-04W2				41	18					59

