



100B Series

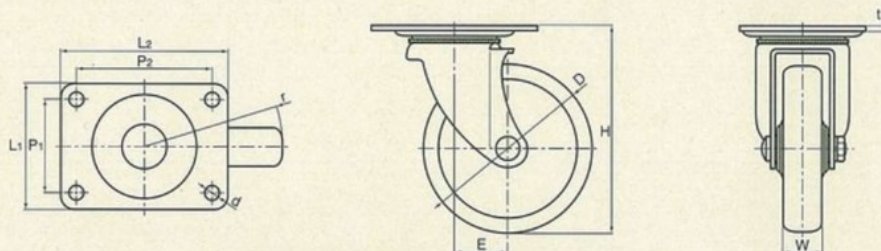

記号 製品 No.	車輪径 D mm	車輪巾 W mm	旋回半径 r mm	偏心距離 E mm	車輪取付高 H mm	座金寸法 L1 × L2 mm	取付穴ピッチ P1 × P2 mm	取付穴径 d mm	取付座厚 t mm	許容荷重 1ヶ当 (kg)
No.105B	63	23	57	25	80	54 × 70	36 × 54	6.5	2.3	70
No.106B	75	23	63	25	93	54 × 70	36 × 54	6.5	2.3	75
No.107B	100	22	83	33	123	75 × 99	56 × 80	8.5	2.9	100
No.108B	130	25	101	36	150	75 × 99	56 × 80	8.5	2.9	110
No.109B	155	28	122	44	190	90 × 125	67 × 103	10.5	4	140
No.111B	200	32	153	53	236	90 × 125	67 × 102	13	4	110


100Bs Series

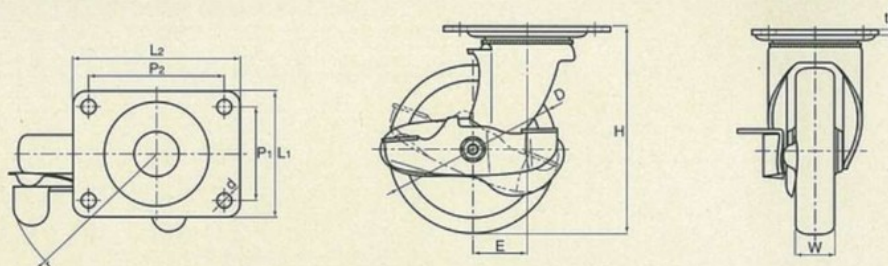

●旋回半径は、ストッパー ON・OFF 何れかの最大値になります。弾性板が制止板より出ている場合はその数値です。

記号 製品 No.	車輪径 D mm	車輪巾 W mm	旋回半径 r mm	偏心距離 E mm	車輪取付高 H mm	座金寸法 L1 × L2 mm	取付穴ピッチ P1 × P2 mm	取付穴径 d mm	取付座厚 t mm	許容荷重 1ヶ当 (kg)
No.105BS	63	23	72	25	80	54 × 70	36 × 54	6.5	2.3	70
No.106BS	75	23	73	25	93	54 × 70	36 × 54	6.5	2.3	75
No.107BS	100	22	93	33	123	75 × 99	56 × 80	8.5	2.9	100
No.108BS	130	25	105	36	150	75 × 99	56 × 80	8.5	2.9	110
No.109BS	155	28	130	44	190	90 × 125	67 × 103	10.5	4	140
No.111BS	200	32	159	53	236	90 × 125	67 × 102	13	4	110

600B Series

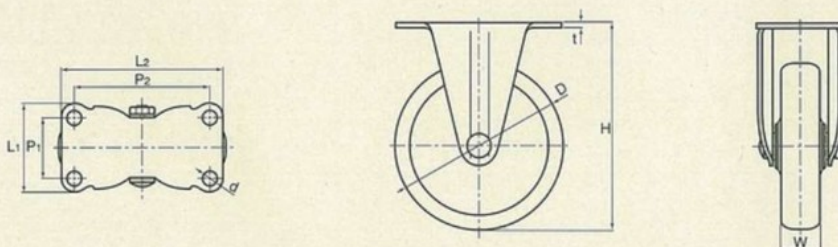

記号 製品 No.	車輪径 D mm	車輪巾 W mm	車輪取付高 H mm	取付板巾 L1 mm	取付板長 L2 mm	取付穴ピッチ P1 × P2 mm	取付穴径 d mm	取付座厚 t mm	許容荷重 1ヶ当 (kg)
No.605B	63	23	80	51	85	36 × 70	6.5	2.3	70
No.606B	75	23	93	51	85	36 × 70	6.5	2.3	75
No.607B	100	22	123	53	97	36 × 80	8.5	2.3	100
No.608B	130	25	150	53	97	36 × 80	8.5	2.3	110
No.609B	155	28	190	72	123	52 × 103	10.5	2.9	140
No.611B	200	32	236	78	136	52 × 110	13	2.9	110