



100HB-P Series

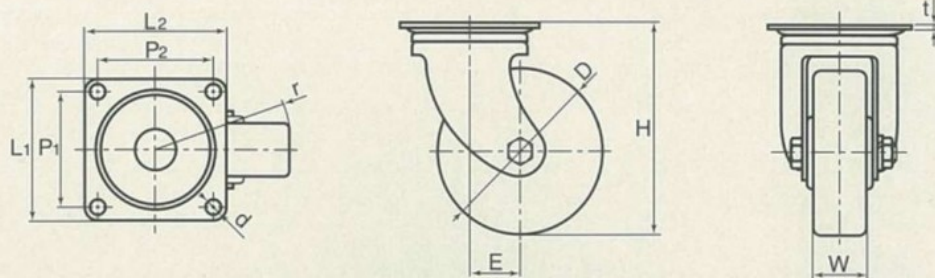

記号 製品 No.	車輪径 D mm	車輪巾 W mm	旋回半径 r mm	偏心距離 E mm	車輪取付高 H mm	座金寸法 L1 × L2 mm	取付穴ピッチ P1 × P2 mm	取付穴径 d mm	取付座厚 t mm	許容荷重 1ヶ当 (kg)
No.104ZH-P	50	28	51	25	68	64 × 64	50 × 50	6.5	2.3	160
No.105HB-P	65	38	56	22	92	90 × 90	71 × 71	10.5	3.2	230
No.106HB-P	75	38	62	22	106	90 × 90	71 × 71	10.5	3.2	240
No.107HB-P	100	38	73	22	130	90 × 90	71 × 71	10.5	3.2	260
No.108HB-P	130	42	106	40	165	110 × 110	90 × 90	10.5	4	350
No.109HB-P	150	45	116	40	187	110 × 110	90 × 90	10.5	4	450


100HB-PS Series

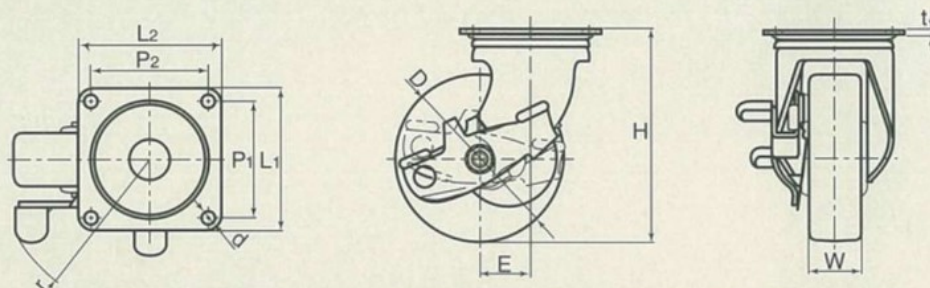

●旋回半径は、ストッパー ON・OFF 何れかの最大値になります。弾性板が制止板より出ている場合はその数値です。

記号 製品 No.	車輪径 D mm	車輪巾 W mm	旋回半径 r mm	偏心距離 E mm	車輪取付高 H mm	座金寸法 L1 × L2 mm	取付穴ピッチ P1 × P2 mm	取付穴径 d mm	取付座厚 t mm	許容荷重 1ヶ当 (kg)
No.104ZH-PS	50	28	65	25	68	64 × 64	50 × 50	6.5	2.3	160
No.105HB-PS	65	38	66	22	92	90 × 90	71 × 71	10.5	3.2	230
No.106HB-PS	75	38	68	22	106	90 × 90	71 × 71	10.5	3.2	240
No.107HB-PS	100	38	82	22	130	90 × 90	71 × 71	10.5	3.2	260
No.108HB-PS	130	42	119	40	165	110 × 110	90 × 90	10.5	4	350
No.109HB-PS	150	45	130	40	187	110 × 110	90 × 90	10.5	4	450

600HB-P Series

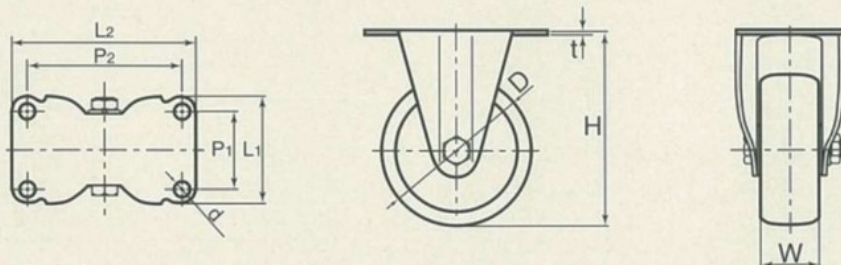

記号 製品 No.	車輪径 D mm	車輪巾 W mm	車輪取付高 H mm	取付板巾 L1 mm	取付板長 L2 mm	取付穴ピッチ P1 × P2 mm	取付穴径 d mm	取付座厚 t mm	許容荷重 1ヶ当 (kg)
No.604ZH-P	50	28	68	50	80	36 × 66	6.5	2.3	160
No.605HB-P	65	38	92	67	111	47 × 91	10.5	2.9	230
No.606HB-P	75	38	106	72	123	52 × 103	10.5	2.9	240
No.607HB-P	100	38	130	72	123	52 × 103	10.5	2.9	260
No.608HB-P	130	42	165	86	135	63 × 112	10.5	3.2	350
No.609HB-P	150	45	187	86	135	63 × 112	10.5	3.2	450